


How to DMZ for PlayStation 4 on the ZTE F668

In your web browser type <http://192.168.1.1> and press enter. By default the IP address should be set to 192.168.1.1.

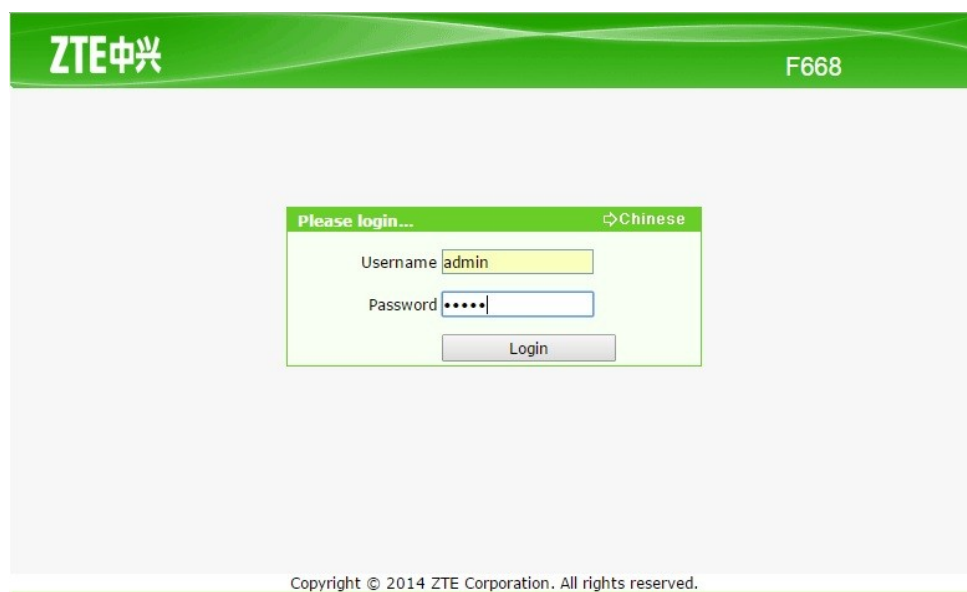

You should see a box prompting you for your username and password. Enter your username and password now.

The Default ZTE F668 Router Username is: admin

The Default ZTE F668 Router Password is: admin

Click the **Login** button to log in to your ZTE F668 router.

Now that you are logged in to your ZTE F668 router you should see the following:



Click the **Security** link near the top of the page.

ZTE中兴 F668

Chinese Status Network Security Application Administration Logout

Firewall
IP Filter
MAC Filter
URL Filter
ALG
DMZ Host
Service Control

Enable

WAN Connection omci_ipv4_pppoe_1

Enable MAC Mapping

DMZ Host IP Address 192.168.1.150

Submit Cancel

Copyright © 2014 ZTE Corporation. All rights reserved.

The menu on the left should change. In this new menu, click **DMZ host**.
You should now see a new menu. In this new menu, click **enable**.
From the dropdown box select your connection (only one should appear)
In the DMZ Host IP address add 192.168.1.150
Press Submit