


# How to DMZ for Xbox One on the ZTE F668

In your web browser type <http://192.168.1.1> and press enter. By default the IP address should be set to 192.168.1.1.

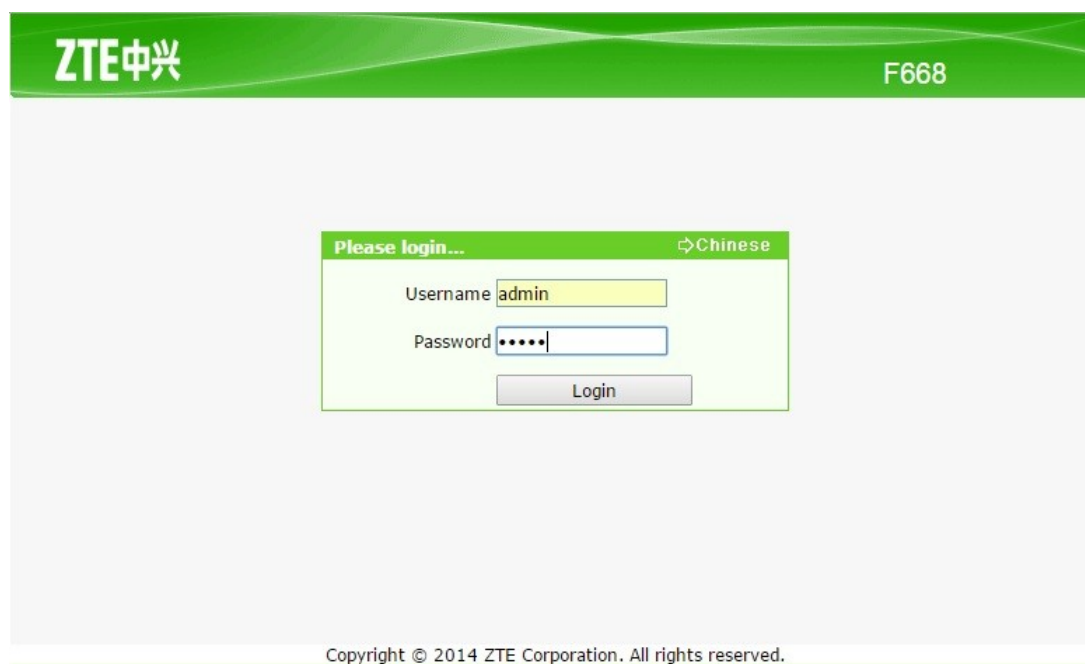

You should see a box prompting you for your username and password. Enter your username and password now.

**The Default ZTE F668 Router Username is: admin**  
**The Default ZTE F668 Router Password is: admin**

Click the **Login** button to log in to your ZTE F668 router.

Now that you are logged in to your ZTE F668 router you should see the following:



Click the **Security** link near the top of the page.

The screenshot shows the ZTE F668 web interface. At the top, there is a green header with the ZTE logo and the model number 'F668'. Below the header is a navigation bar with tabs for 'Status', 'Network', 'Security', 'Application', and 'Administration', along with a 'Logout' button. The 'Security' tab is selected. On the left side, there is a vertical menu with options: 'Firewall', 'IP Filter', 'MAC Filter', 'URL Filter', 'ALG', 'DMZ Host', and 'Service Control'. The 'DMZ Host' option is highlighted. The main content area shows the configuration for DMZ Host. It includes an 'Enable' checkbox which is checked. Below it is a 'WAN Connection' dropdown menu with 'omci\_ipv4\_pppoe\_1' selected. There is also an 'Enable MAC Mapping' checkbox which is unchecked. At the bottom of the configuration area, the 'DMZ Host IP Address' is set to '192.168.1.150'. At the bottom right of the page, there are 'Submit' and 'Cancel' buttons. A copyright notice at the very bottom reads 'Copyright © 2014 ZTE Corporation. All rights reserved.'

The menu on the left should change. In this new menu, click **DMZ host**. You should now see a new menu. In this new menu, click **enable**. From the dropdown box select your connection (only one should appear) In the DMZ Host IP address add 192.168.1.150 Press Submit